

RF Coax Connector Protective Covers and Accessories Table of Contents



Table of Contents

650-072 Dummy Stowage Receptacle for (Type HN) Coaxial RF Connectors	4
650-073 Dummy Stowage Receptacle for Type MIL-PRF-39012 (SMA) Coaxial RF Connectors	5
650-074 Dummy Stowage Receptacle for MIL-PRF-39012 (Type N) Coaxial RF Connectors	6
650-075 Dummy Stowage Receptacle for Type MIL-PRF-39012 (TNC) Coaxial RF Connectors	7
650-076 Dummy Stowage Receptacle for Type MIL-PRF-39012 (BNC) Coaxial RF Connectors	8
660-101 Protective Dust Cover for (Type HN) Coaxial RF Plug Connectors	9
660-102 Protective Dust Cover for (Type HN) Coaxial RF Receptacle Connectors	10
660-103 Protective Dust Cover for Type MIL-PRF-39012 (SMA) Coaxial RF Plug Connectors	11
660-104 Protective Dust Cover for Type MIL-PRF-39012 (SMA) Coaxial RF Receptacle Connectors	12
660-105 Protective Dust Cover for Type MIL-PRF-39012 (Type N) Coaxial RF Plug Connectors	13
660-106 Protective Dust Cover for Type MIL-PRF-39012 (Type N) Coaxial RF Receptacle Connectors	14
660-107 Protective Dust Cover for Type MIL-PRF-39012 (Type TNC) Coaxial RF Plug Connectors	15
660-108 Protective Dust Cover for Type MIL-PRF-39012 (Type TNC) Coaxial RF Receptacle Connectors	16
660-109 Protective Dust Cover for Type MIL-PRF-39012 (Type BNC) Coaxial RF Plug Connectors	17
660-110 Protective Dust Cover for Type MIL-PRF-39012 (Type BNC) Coaxial RF Receptacle Connectors	18
667-127 Protective Receptacle Cover and Dummy Plug for MIL-DTL-38999 Series II Type BNC RF Coax Connectors	19