

# MIL-DTL-38999 Series I, II, III, and IV QPL Hermetic Connectors



## Mil Qualified D38999 Series I, II, III and IV Hermetic Receptacles—Pin and Socket— Plus Glenair Commercial Equivalents • Built-In Maximim Design Flexibility

Quick Selection Guide		
Part number	Description	Page
	MIL-DTL-38999 Series I, II, III and IV Hermetic Class Insert Arrangements	B-2 – B-3
	MIL-DTL-38999 Series I, II, III and IV Hermetic Class Layouts and Pin Counts	B-4
	MIL-DTL-38999 Hermetic Class Material Specifications and Finishes	B-5
	MIL-DTL-38999 Connector Performance Specifications	B-6 – B-8
	MIL-DTL-38999 Contact Performance Specifications	B-9
	MIL-DTL-38999 Series I – IV Alternate Keyway Positions	B-10 - B-12
	Recommended Torque Values	B-13
	MIL-DTL-38999 Hermetic Connectors and Environmental Mates	B-14 – B-15
<a href="#">MS27469 / 231-100-H0</a>	Wall Mount Hermetic Receptacle, Series I	B-16 – B-17
<a href="#">MS27470 / 231-100-H7</a>	Jam Nut Mount Hermetic Receptacle, Series I	B-18 – B-19
<a href="#">MS27471 / 231-100-H5</a>	Solder Mount Hermetic Receptacle, Series I	B-20 – B-21
<a href="#">231-103-H7</a>	Jam Nut Mount Hermetic Bulkhead Feed-Thru, Series I	B-22 – B-23
<a href="#">231-103-H9</a>	Sav-Con® Jam Nut Mount Bulkhead Feed-Thru, Series I	B-24 – B-25
<a href="#">257-255</a>	Jam Nut Mount Hermetic Receptacle, Series I	B-26 – B-27
<a href="#">947-117</a>	Jam Nut Mount Hermetic Bulkhead Feed-Thru, Series I	B-28 – B-29
<a href="#">MS27475 / 232-100-H0</a>	Wall Mount Hermetic Receptacle, Series II	B-30 – B-31
<a href="#">MS27476 / 232-100-H2</a>	Box Mount Hermetic Receptacle, Series II	B-32 – B-33
<a href="#">MS27477 / 232-100-H7</a>	Jam-Nut Mount Hermetic Receptacle, Series II	B-34 – B-35
<a href="#">MS27478 / 232-100-H5</a>	Solder Mount Hermetic Receptacle, Series II	B-36 – B-37
<a href="#">232-103-H7</a>	Jam Nut Mount Hermetic Bulkhead Feedthrough, Series II Type	B-38 – B-39
<a href="#">232-103-H9</a>	"Sav-Con"® Connector Saver Jam Nut Mount Hermetic Bulkhead Feedthrough, Series II Type	B-40 – B-41
<a href="#">237-280</a>	Special Weld-Mount Hermetic Receptacle, Series II	B-42 – B-43
<a href="#">947-120</a>	Jam Nut Mount Hermetic Bulkhead Feed-Thru, Series II	B-44 – B-45
<a href="#">947-278</a>	Jam Nut Mount Hermetic Bulkhead Feed-Thru	B-46 – B-47
<a href="#">D38999/21 / 233-100-H2</a>	Box Mount Hermetic Receptacle, Series III	B-48 – B-49
<a href="#">D38999/23 / 233-100-H7</a>	Jam Nut Mount Hermetic Receptacle, Series III	B-50 – B-51
<a href="#">D38999/25 / 233-100-H5</a>	Solder Mount Hermetic Receptacle, Series III	B-52 – B-53
<a href="#">D38999/27 / 233-100-H8</a>	Weld Mount Hermetic Receptacle, Series III	B-54 – B-55
<a href="#">233-103-H7</a>	Jam Nut Mount Hermetic Bulkhead Feed-Thru, Series III	B-56
<a href="#">233-103-H9</a>	Jam Nut Mount Hermetic Plug/Receptacle Bulkhead Feed-Thru, Series III	B-57
<a href="#">237-033</a>	Jam Nut Mount Hermetic with Double O-Rings, Series III	B-58 – B-59
<a href="#">237-063</a>	Special Hermetic Jam Nut Mount Receptacle, Series III	B-60 – B-61
<a href="#">237-153</a>	Hermetic Dual Flange Jam Nut Mount Receptacle, Series III	B-62 – B-63
<a href="#">257-093</a>	Jam Nut Mount Hermetic Bulkhead Feed-Thru, Series III	B-64 – B-65
<a href="#">257-121</a>	Special Jam Nut Mount Hermetic Receptacle with Accessory Threads, Series III	B-66 – B-67
<a href="#">257-215</a>	Jam Nut Mount Hermetic Bulkhead Feed-Thru w/ Crimp Removable Contacts, Series III	B-68 – B-69
<a href="#">257-216</a>	Jam Nut Mount Hermetic Bulkhead Feed-Thru w/ Crimp Removable Contacts, Series III	B-70 – B-71
<a href="#">257-288</a>	Box Mount Hermetic Bulkhead Feed-Thru w/ Crimp Removable Contacts, Series III	B-72 – B-73
<a href="#">257-332</a>	Hermetic Jam Nut Receptacle w/ Crimp Removable Socket Contacts, Series III	B-74 – B-75
<a href="#">257-333</a>	Hermetic Jam Nut Receptacle w/ Crimp Removable Contacts, Series III	B-76 – B-77
<a href="#">947-082</a>	Jam Nut Hermetic Bulkhead Feed-Thru, Series III	B-78
<a href="#">947-115</a>	Jam Nut Hermetic Bulkhead Feed-Thru, Series III	B-79
<a href="#">947-282</a>	Flange Mount Hermetic Bulkhead Feed-Thru, Series III	B-80 – B-81
<a href="#">D38999/41 / 234-100-H2</a>	Box Mount Hermetic Receptacle, Series IV	B-82 – B-83
<a href="#">D38999/43 / 234-100-H7</a>	Jam Nut Mount Hermetic Receptacle, Series IV	B-84 – B-85
<a href="#">D38999/45 / 234-100-H5</a>	Solder Mount Hermetic Receptacle, Series IV	B-86 – B-87
<a href="#">D38999/48 / 234-100-H8</a>	Weld Mount Hermetic Receptacle, Series IV	B-88 – B-89
<a href="#">980-002</a>	Non-Environmental Rear Accessory Thread Adapter for MIL-DTL-38999/23 and /43	B-90 – B-91