

 
 







## IPT and IPT-SE Series Tools

### IPT Connector Assembly Tools

MANUAL CRIMPING TOOL	PNEUMATIC CRIMPING TOOL	TURRET	INSERTION TOOL	REMOVAL TOOL	GUIDE PIN
					
M.105001 (# M.105007)	M.105003	M.105011 (# M.105008)	M.117346	M.118251	M.125007
M.105001 (# M.105007)	M.105003	M.105011 (# M.105008)	M.117346	M.118251	M.125007
M.105001	M.105003	M.105011	M.117083	M.118251	M.125001
M.105001	M.105003	M.105011	M.117083	M.118251	M.125001

### IPT-SE Connector Assembly Tools

		Contact Size	Wires Cross Section						
			mm <sup>2</sup>	AWG					
10-314980-20P		20		20	M.105001	M.105003	M.105011	M.117349	M.118290
	10-314980-20S								
10-314980-16P				16	M.105001	M.105003	M.105011	M.117383	M.118291
	10-314980-16S								