

Utilizing ArmorLite™ pull-over braid

TOOLS AND MATERIALS:


- ArmorLite™ Braid (P/N 103-051)
- Split Rings
- Banding Straps
- Band-Master ATS® Hand Banding Tool
- Lace tie





Step 1: Place split rings onto assembly—two on the main leg and one on the breakout leg.



Step 2: Install a length of ArmorLite™ over the breakout leg. Flare the braid material out and over the main leg of the assembly and over the adjacent split ring. Spot tie in place.

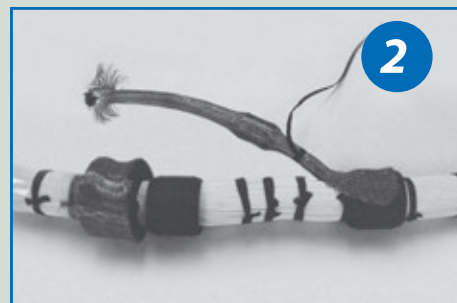


Step 3: Position two separate lengths of ArmorLite™ on either side of the breakout and over the main leg of the assembly. Make a 2-inch cut in each respective length and overlap both pieces to surround the breakout leg and amply cover both split rings.

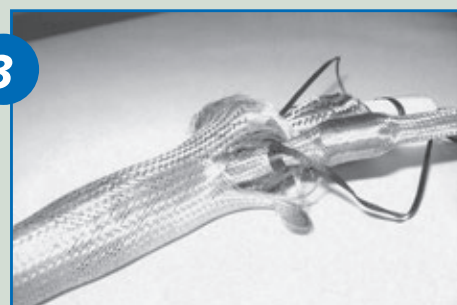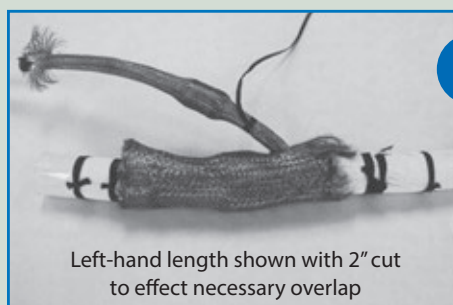

Step 4: Use lacing ties to secure all braid in place.



Step 5: Install a Band-Master ATS® Band over each termination area, exactly centered on split support rings.

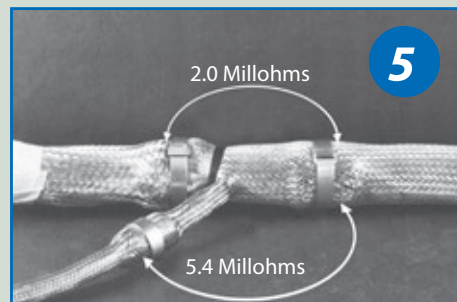

IMPORTANT: Always roll band through the buckle slot twice (see coiled band in photo above). Bands must be double-coiled to function correctly. All Band-Master ATS® bands are available pre-coiled.